


ASSEMBLY INSTRUCTIONS FOR LISTEC VU-LITE STUDIO PROMPTER WITH EXTRA WIDE ANGLE HOOD

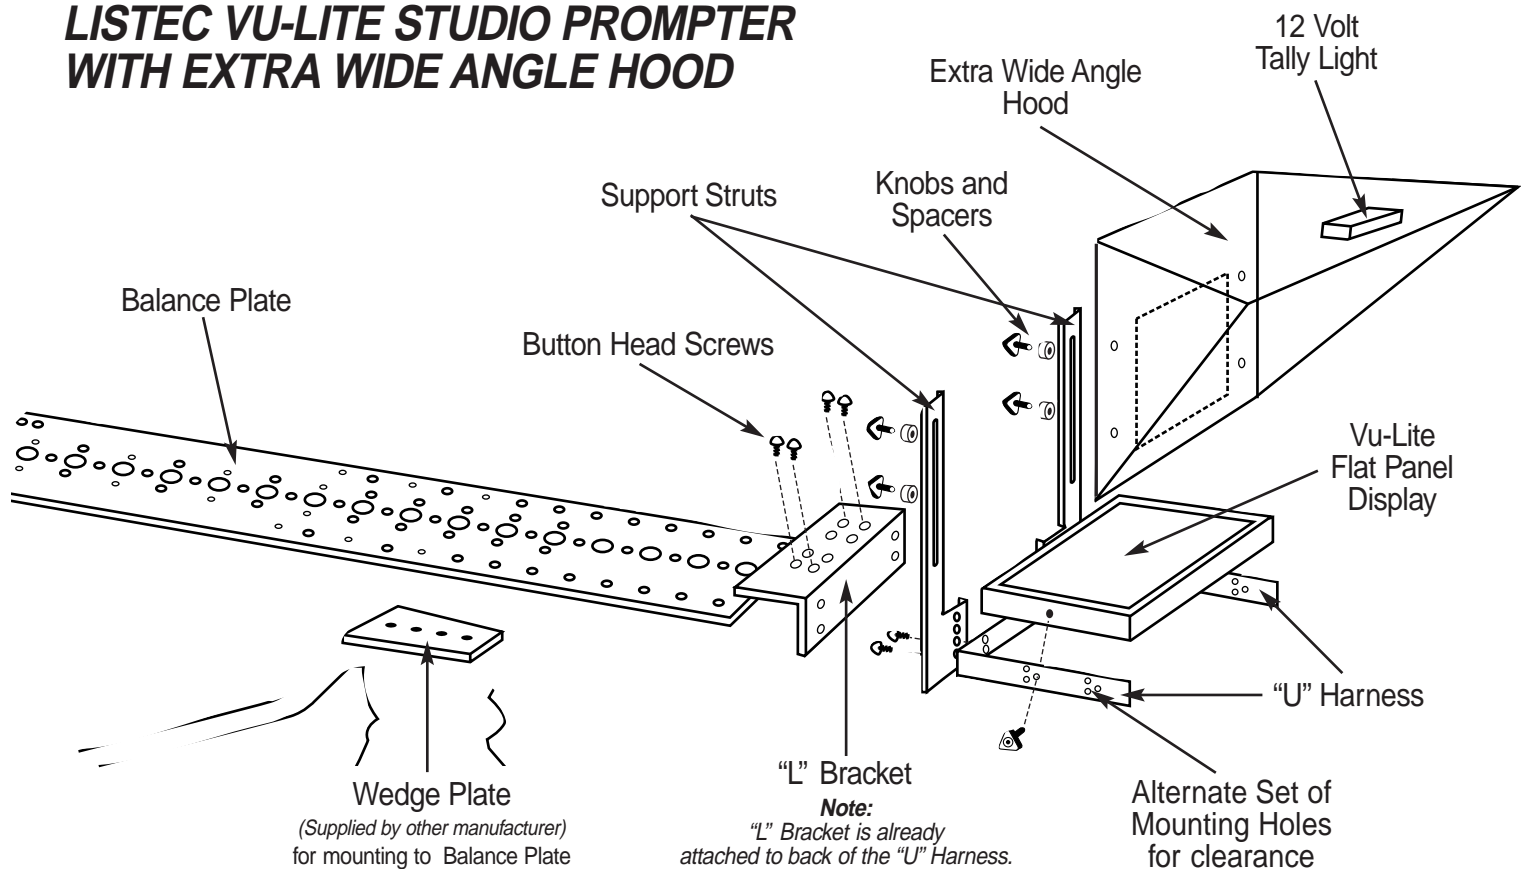

"FSW" SERIES CONFIGURATION

Your Listec Vu-Lite Prompter has been supplied with the mounting hardware specified at the time of ordering. Display Panels are supplied with a U-Harness that is compatible with previous Listec prompter hardware.

1. Attach **Balance Plate** to base of camera through clearance holes with screws provided.
2. Attach the **Wedge Plate** to the **Balance Plate**, estimating horizontal balance point.
3. Attach **Balance Plate** with camera to pan head.
4. Attach the **"L" Bracket with the Display Panel** to the **Balance Plate** with the four 3/8-16" x 3/4" **Button Head Screws** supplied.
5. Attach the **Hood** to the front of **Support Struts** using the four **Knobs** and **Spacers** provided.
6. After attaching the **Hood**, carefully insert **Prompter Mirror** with Colored Dot Label facing out. Secure with clip at the top of the **Hood**. Adjust the height of the Mirror / Hood Assembly as required. *(Please see photo on reverse side.)*
7. Orient the **Flat Panel** in its **"U" Harness** with **Mode Push-buttons** at the rear, towards camera assembly.
8. Connect the Power Adapter Cable from AC Power Supply (or optional DC Power Converter) to the Power Input on the Vu-Lite Flat Panel Display, as well as all of the necessary video cables, i.e. Composite, VGA or S-Video. **Take special care that the arrow on the connector cable lines up with the socket, permitting the pins to engage correctly.**
9. Attach Power Supply or DC Converter to the Tripod Leg (or wherever suitable) with Velcro supplied.

PLEASE NOTE

Avoid touching the mirror. Do not use strong ammoniated cleansers.